

## UNRESTRAINED BEAM DESIGN – II

### 1.0 INTRODUCTION

The basic theory of beam buckling was explained in the previous chapter. Doubly symmetric I- section has been used throughout for the development of the theory and later discussion. It was established that practical beams fail by:

- (i) Yielding, if they are short
- (ii) Elastic buckling, if they are long, or
- (iii) Inelastic lateral buckling, if they are of intermediate length.

A conservative method of designing beams was also explained and its limitations were outlined.

In this chapter a few cases of lateral buckling strength evaluation of beams encountered in practice would be explained. Cantilever beams, continuous beams, beams with continuous and discrete lateral restraints are considered. Cases of monosymmetric beams and non-uniform beams are covered. The buckling strength evaluation of non-symmetric sections is also described.

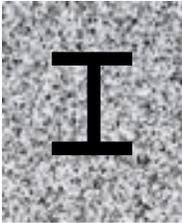
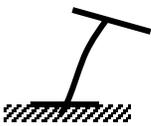
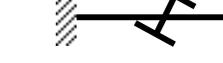
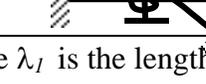
### 2.0 CANTILEVER BEAMS

A cantilever beam is completely fixed at one end and free at the other. In the case of cantilevers, the support conditions in the transverse plane affect the moment pattern. For design purposes, it is convenient to use the concept of *notional effective length*,  $k$ , which would include both loading and support effects. The notional effective length is defined as the length of the notionally simply supported (in the lateral plane) beam of similar section, which would have an elastic critical moment under uniform moment equal to the elastic critical moment of the actual beam under the actual loading conditions. Recommended values of ' $k$ ' for a number of cases are given in Table 1. It can be seen from the values of ' $k$ ' that it is more effective to prevent twist at the cantilever edge rather than the lateral deflection.

Generally, in framed structures, continuous beams are provided with overhang at their ends. These overhangs have the characteristics of cantilever beams. In such cases, the type of restraint provided at the outermost vertical support is most significant. Effective prevention of twist at this location is of particular importance. Failure to achieve this would result in large reduction of lateral stability as reflected in large values of ' $k$ ', in Table 1.

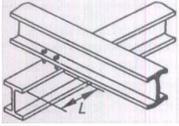
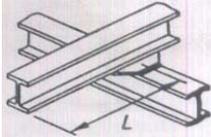
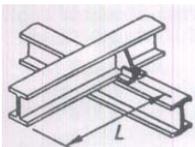
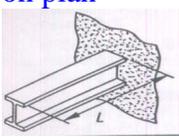
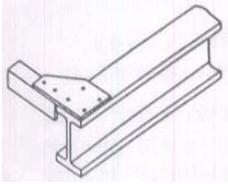
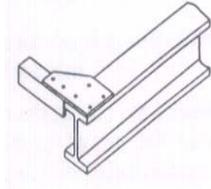
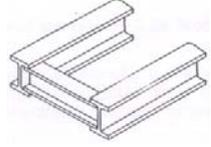
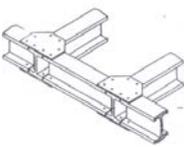
© Copyright reserved

**Table 1 Recommended values of ‘k’**

Restraint conditions		Loading condition		
At support	At tip	Normal	Destabilizing	
Built in laterally and torsionally 	Free		$0.8\lambda$	$1.4\lambda$
	Lateral restraint only		$0.7\lambda$	$1.4\lambda$
	Torsional Restraint only		$0.6\lambda$	$0.6\lambda$
	Lateral and Torsional Restraint		$0.5\lambda$	$0.5\lambda$
Continuous with lateral and torsional restraint 	Free		$1.0\lambda$	$2.5\lambda$
	Laterally restraint only		$0.9\lambda$	$2.5\lambda$
	Torsional Restraint only		$0.8\lambda$	$1.5\lambda$
	Laterally and Torsional Restraint		$0.7\lambda$	$1.2\lambda$
Continuous, with lateral restraint only 	Free		$3.0\lambda$	$7.5\lambda$
	Lateral restraint only		$2.7\lambda$	$7.5\lambda$
	Torsional Restraint only		$2.4\lambda$	$4.5\lambda$
	Laterally and Torsional Restraint		$2.1\lambda$	$3.6\lambda$
For continuous cantilevers $\lambda$ not less than $\lambda_l$ where $\lambda_l$ is the length of the adjacent span				

For cantilever beams of projecting length, L, the effective length  $L_{LT}$  to be used shall be taken as in Table 3 (Table 8.4 of New IS: 800) for different support conditions.

**Table 3 Effective length for Cantilever Beams**  
 (Table 8.4 of New IS: 800, Effective Length,  $L_{eff}$ , for Cantilever of Length L)  
 (Section 8.3.3)


Restraint condition		Loading conditions	
At Support	At tip	Normal	destabilizing
a) Continuous, with lateral restraint to top flange 	1) Free 2) Lateral restraint to top flange 3) Torsional restraint 4) Lateral and torsional restraint	3.0L 2.7L 2.4L 2.1L	7.5L 7.5L 4.5L 3.6L
b) Continuous, with partial torsional restraint 	1) Free 2) Lateral restraint to top flange 3) Torsional restraint 4) Lateral and torsional restraint	2.0L 1.8L 1.6L 1.4L	5.0L 5.0L 3.0L 2.4L
c) Continuous, with lateral and torsional restraint 	1) Free 2) Lateral restraint to top flange 3) Torsional restraint 4) Lateral and torsional restraint	1.0L 0.9L 0.8L 0.7L	2.5L 2.5L 1.5L 1.2L
d) Restrained laterally, torsionally and against rotation on plan 	1) Free 2) Lateral restraint to top flange 3) Torsional restraint 4) Lateral and torsional restraint	0.8L 0.7L 0.6L 0.5L	1.4L 1.4L 0.6L 0.5L
<b>Top restraint conditions</b>			
1) Free 	2) Lateral restraint to top flange 	3) Torsional restraint 	4) Lateral and torsional restraint 

### 3.0 CONTINUOUS BEAMS

Beams, extending over a number of spans, are normally continuous in vertical, lateral or in both planes. In the cases, where such continuity is not provided lateral deflection and twisting may occur. Such a situation is typically experienced in roof purlins before sheeting is provided on top of them and in beams of temporary nature. For these cases, it is always safe to make no assumption about possible restraints and to design them for maximum effective length.

Another case of interest with regard to lateral buckling is a beam that is continuous in the lateral plane i.e. the beam is divided into several segments in the lateral plane by means of fully effective braces. The buckled shapes for such continuous beams include deformation of all the segments irrespective of their loading. Effective length of the segments will be equal to the spacing of the braces if the spacing and moment patterns are similar. Otherwise, the effective length of each segment will have to be determined separately.

To illustrate the behaviour of continuous beams, a single-span beam provided with equally loaded cross beams is considered (see Fig. 1).

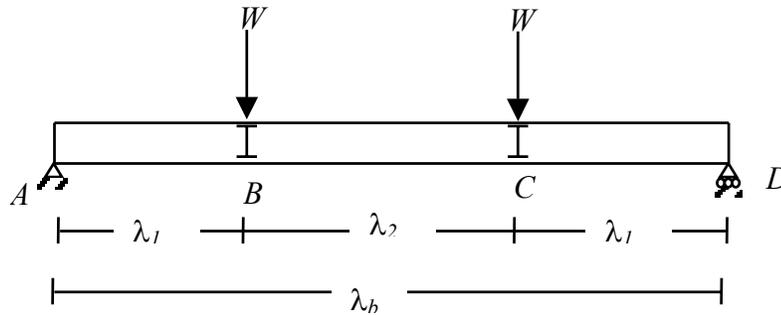

**Fig. 1 Single - span beam**

Two equally spaced, equally loaded cross beams divide the beam into three segments laterally. In this case, true  $M_{cr}$  of the beam and its buckling mode would depend upon the spacing of the cross beams. The critical moment  $M_{crB}$  for any ratio of  $\lambda_1 / \lambda_b$  would lie in between the critical moment values of the individual segments. The critical moments for the two segments are obtained using the basic equation given in the earlier chapter.


$$M_{cr1} = 1.75 \frac{\pi}{\lambda_1} \sqrt{(EI_y GJ)} \sqrt{1 + \frac{\pi^2 E \Gamma}{\lambda_1^2 GJ}} \quad (1)$$

(In the outer segment,  $m = 0.57$ . Using  $1 / m$  and the basic moment, the critical moment is determined)

$$M_{cr2} = \frac{\pi}{\lambda_2} \sqrt{(EI_y GJ)} \sqrt{1 + \frac{\pi^2 E \Gamma}{\lambda_2^2 GJ}} \quad (2)$$

(This segment is loaded by uniform moments at its ends – basic case)


$M_{cr1}$  and  $M_{cr2}$  values are plotted against  $\lambda_1/\lambda_b$  and shown in Fig. 2 for the particular case considered with equal loading and a constant cross section throughout.

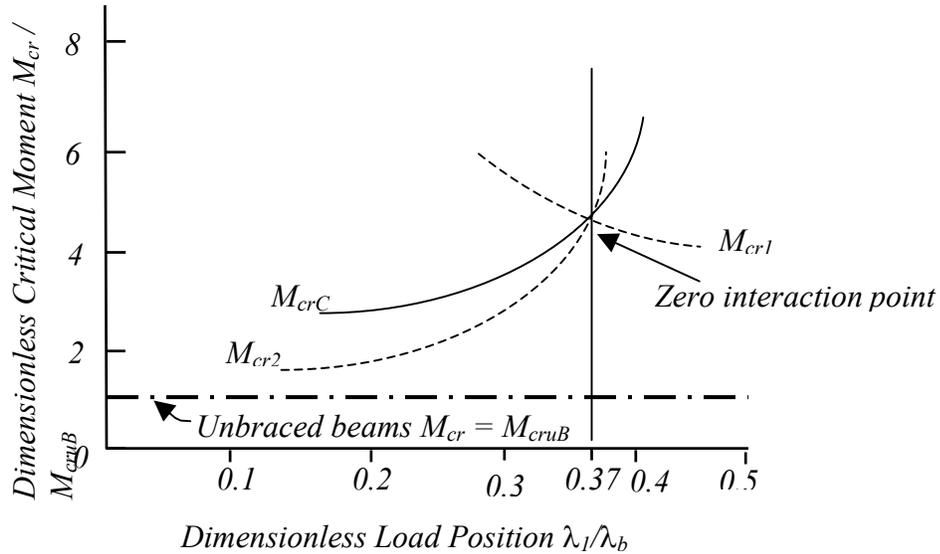

**Fig.2 Interaction between  $M_{cr1}$  and  $M_{cr2}$**

It is seen that for  $\lambda_1 / \lambda_b = 0.37$ ,  $M_{cr1}$  and  $M_{cr2}$  are equal and the two segments are simultaneously critical. The beam will buckle with no interaction between the two segments. For any other value of  $\lambda_1 / \lambda_b$  there will be interaction between the segments and the critical load would be greater than the individual values, as shown in the figure. For values of  $\lambda_1 / \lambda_b < 0.37$ , outer segments will restrain the central segment and vice-versa when  $\lambda_1 / \lambda_b > 0.37$ .

The safe load for a laterally continuous beam may be obtained by calculating all segmental critical loads individually and choosing the lowest value assuming each segment as simply supported at its ends.

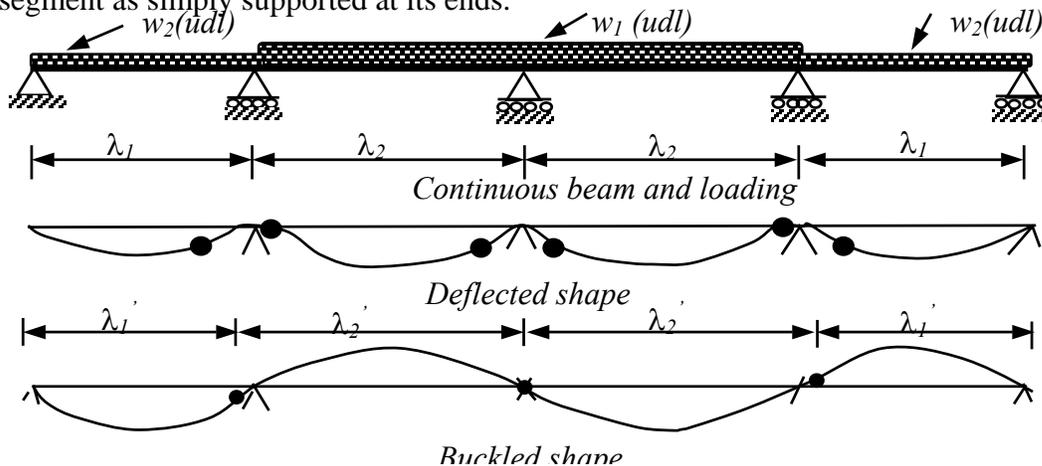

**Fig. 3 Continuous beam – deflected shape and buckled shape**

It is of interest to know the behaviour of beams, which are continuous in both transverse and lateral planes. Though the behaviour is similar to the laterally unrestrained beams,

their moment patterns would be more complicated. The beam would buckle in the lateral plane and deflect in the vertical plane. There is a distinct difference between the points of contraflexure in the *buckled shape* and points of contraflexure in the *deflected shape*. These points will not normally occur at the same location within a span, as shown in Fig. 3. Therefore, it is wrong to use the distance between the points of contraflexure of the deflected shape as the effective length for checking buckling strength.

### 3.1 PROVISIONS OF NEW IS: 800 (LSM VERSION)

For beams, which are provided with members giving effective lateral restraint to the compression flange at intervals along the span, in addition to the end torsional restraint required, the effective length for lateral torsional buckling shall be taken as the distance, centre-to-centre, of the restraint members in the relevant segment under normal loading condition and 1.2 times this distance, where the load is not acting on the beam at the shear and is acting towards the shear centre so as to have destabilizing effect during lateral torsional buckling deformation.

Where a member is provided as intermediate lateral supports to improve the lateral buckling strength, these restraints should have sufficient strength and stiffness to prevent lateral movement of the compression flange at that point, relative to the end supports. The intermediate lateral restraints should be either connected to an appropriate bracing system capable of transferring the restraint force to the effective lateral support at the ends of the member, or should be connected to an independent robust part of the structure capable of transferring the restraint force. Two or more parallel member requiring such lateral restraint shall not be simply connected together assuming mutual dependence for the lateral restraint.

The intermediate lateral restraints should be connected to the member as close to the compression flange as practicable. Such restraints should be closer to the shear centre of the compression flange than to the shear centre of the section. However, if torsional restraint preventing relative rotation between the two flanges is provided, they intermediate lateral restraint may be connected at any appropriate level.

For beams which are provided with members giving effective lateral restraint at intervals along the span, the effective lateral restraint shall be capable of resisting a force of 2.5 percent of the maximum force in the compression flange taken as divided equally between the points at which the restraint members are provided. Further, each restraint point should be capable of resisting 1 percent of the maximum force in the compression flange.

For Purlins which are adequately restrained by sheeting need not be normally checked for the restraining forces required by rafters, roof trusses or portal frames that carry predominately roof loads provided there is bracing of adequate stiffness in the plane of rafters or roof sheeting which is capable of acting as a stressed skin diaphragm.

### 4.0 EFFECTIVE LATERAL RESTRAINT

Providing proper lateral bracing may increase the lateral stability of a beam. Lateral bracing may be either discrete (e.g. cross beams) or continuous (e.g. beam encased in concrete floors). The lateral buckling capacity of the beams with discrete bracing may be determined by using the methods described in a later Section. For the continuously restrained beams, assuming lateral deflection is completely prevented, design can be based on in-plane behaviour. It is important to note that in the hogging moment region of a continuous beam, if the compression flange (bottom flange) is not properly restrained, a form of lateral deflection with cross sectional distortion would occur.

#### 4.1 Discrete bracing

In order to determine the behaviour of discrete braces, consider a simply supported beam provided with a single lateral support of stiffness  $K_b$  at the centroid, as shown in Fig. 4.

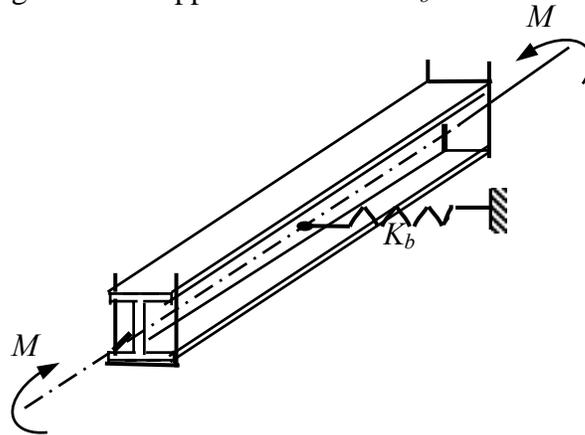


Fig. 4 Beam with single lateral support

The relationship between  $K_b$  and  $M_{cr}$  is shown in Fig. 5.

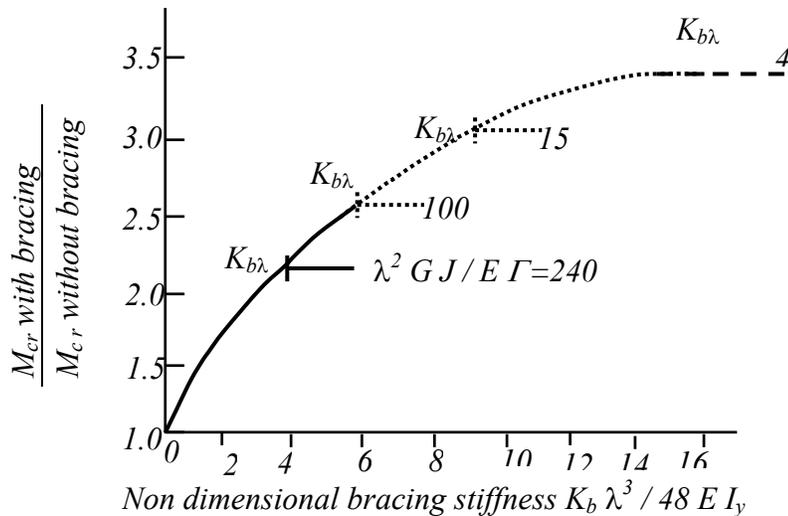


Fig. 5 Relationship between  $K_b$  and  $M_{cr}$

It is seen that  $M_{cr}$  value increases with  $K_b$ , until  $K_b$  is equal to a limiting value of  $K_{b\lambda}$ . The corresponding  $M_{cr}$  value is equal to the value of buckling for the two segments of the beam.  $M_{cr}$  value does not increase further as the buckling is now governed by the individual  $M_{cr}$  values of the two segments.

Generally, even a light bracing has the ability to provide substantial increase in stability. There are several ways of arranging lateral bracing to improve stability. The limiting value of the lateral bracing stiffness,  $K_{b\lambda}$ , is influenced by the following parameters.

- Level of attachment of the brace to the beam i.e. top or bottom flange.
- The type of loading on the beam, notably the level of application of the transverse load
- Type of connection, whether capable of resisting lateral and torsional deformation
- The proportion of the beam.

Provision of bracing to tension flanges is not so effective as compression flange bracing. Bracing provided below the point of application of the transverse load would not be able to resist twisting and hence full capacity of the beam is not achieved. For the design of effective lateral bracing systems, the following two requirements are essential.

- Bracing should be of sufficient stiffness so that buckling occurs between the braces
- Lateral bracing should have sufficient strength to withstand the force transferred by the beam.

A general rule is that lateral bracing can be considered as fully effective if the stiffness of the bracing system is at least 25 times the lateral stiffness of the member to be braced. Provisions in BS 5950 stipulate that adequate lateral and torsional restraints are provided if they are capable of resisting 1) a lateral force of not less than 1% of the maximum factored force in the compression flange for lateral restraints, 2) and a couple with lever arm equal to the depth between centroid of flanges and a force not less than 1% of the maximum factored compression flange force.


## 4.2 Continuous restraint

In a framed building construction, the concrete floor provides an effective continuous lateral restraint to the beam. As a result, the beam may be designed using in-plane strength. A few examples of fully restrained beams are shown in Fig. 6.

The lateral restraint to the beam is effective only after the construction of the floor is completed. The beam will have to be temporarily braced after its erection till concreting is done and it has hardened.

For the case shown in Fig.6 (a), the beam is fully encased in concrete, and hence there will be no lateral buckling. In the arrangement shown in Fig.6 (b), the slab rests directly upon the beam, which is left unpainted. Full restraint is generally developed if the load

transmitted and the area of contact between the slab and the beam are adequate to develop the needed restraint by friction and bond.

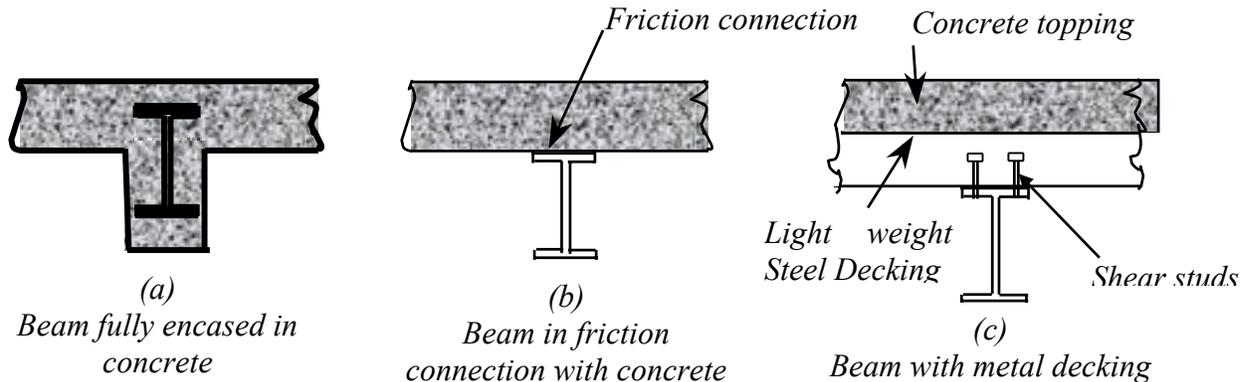

**Fig. 6 Beams with continuous lateral restraint**

For the case shown in Fig.6(c), the metal decking along with the concrete provides adequate bracing to the beam. However, the beam is susceptible to buckling before the placement of concrete due to the low shear stiffness of the sheeting. Shear studs are provided at the steel-concrete interface to enhance the shear resistance. The code provisions require that for obtaining fully effective continuous lateral bracing, it must withstand not less than 1% of the maximum force in the compression flange.

## 5.0 BUCKLING OF MONOSYMMETRIC BEAMS

For beams symmetrical about the major axis only e.g. unequal flanged I- sections, the non-coincidence of the shear centre and the centroid complicates the torsional behaviour of the beam. The monosymmetric I-sections are generally more efficient in resisting loads provided the compressive flange stresses are taken by the larger flange.

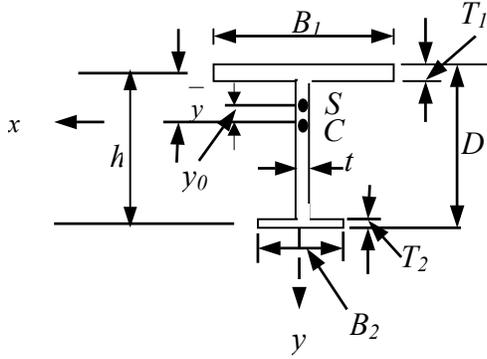
When a monosymmetric beam is bent in its plane of symmetry and twisted, the longitudinal bending stresses exert a torque, which is similar to torsional buckling of short concentrically loaded compression members. The longitudinal stresses exert a torque,  $T_M$  given by

$$T_M = M_x \beta_x d\phi / dz \quad (3)$$

$$\text{where } \beta_x = 1/I_x \int_A (x^2 y + y^3) dA - 2y_0 \quad (4)$$

is the monosymmetry property of the cross section. Explicit expression for  $\beta_x$  for a monosymmetric I-section is given in Fig. 7.

The torque developed,  $T_m$ , changes the effective torsional rigidity of the section from  $GJ$  to  $(GJ + M_x \beta_x)$ . In doubly symmetric beams the torque exerted by the compressive bending stresses is completely balanced by the restoring torque due to the tensile stresses and therefore  $\beta_x$  is zero. In monosymmetric beams, there is an imbalance of torque due to larger stresses in the smaller flange, which is farther from the shear centre.



$$h = D - (T_1 + T_2) / 2$$

$$\bar{y} = \frac{B_2 T_2 h + (D - T_1 - T_2)(D - T_2)t/2}{B_1 T_1 + B_2 T_2 + (D - T_1 - T_2)t}$$

$$y_0 = \alpha h - \bar{y}$$

$$\alpha = \frac{1}{1 + (B_1 / B_2)^3 (T_1 / T_2)}$$

$$\Gamma = \alpha B_1^3 T_1 h^2 / 12$$

$$\beta_x = \frac{1}{I_x} \left\{ \begin{array}{l} (h - \bar{y}) \left[ B_2^3 T_2 / 12 + B_2 T_2 (h - \bar{y})^2 \right] \\ - \bar{y} \left[ B_1^3 T_1 / 12 + B_1 T_1 \bar{y}^2 \right] + \left[ (h - \bar{y} - T_2 / 2)^4 - (\bar{y} - T_1 / 2)^4 \right] t / 4 \end{array} \right\}$$

**Fig. 7 Properties of monosymmetric I-sections**

Hence, when the smaller flange is in compression there is a reduction in the effective torsional rigidity;  $M_x \beta_x$  is negative and when the smaller flange is in tension  $M_x \beta_x$  is positive. Thus, the principal effect of monosymmetry is that the buckling resistance is increased when the larger flange is in compression and decreased when the smaller flange is in compression. This effect is similar to the Wagner effect in columns. The value of critical moment for unequal flange I beam is given by.

$$M_c = \frac{\pi}{\lambda} \sqrt{E I_y G J} \left\{ \sqrt{\left[ 1 + \frac{\pi^2 E \Gamma}{G J \lambda^2} + \left( \frac{\pi \rho_m}{2} \right)^2 \right]} + \frac{\pi \rho_m}{2} \right\} \quad (5)$$

$$\text{Where } \rho_m = \frac{I_{yc}}{I_y} \quad (6)$$

$I_{yc}$  is the section minor axis second moment of area of the compression flange.

The monosymmetry property is approximated to

$$\beta_x = 0.9h (2 \rho_m - 1) (1 - I_y^2 / I_x^2) \quad (7)$$

and the warping constant  $\Gamma$  by

$$\Gamma = \rho_m (1 - \rho_m) I_y h^2 \quad (8)$$

Very little is known of the effects of variations in the loading and the support conditions on the lateral stability of monosymmetric beams. However, from the available results, it is established that for top flange loading higher critical loads are always obtained when the larger flange is used as the compression flange. Similarly for bottom flange loading higher critical loads can be obtained when this is the larger flange. For Tee- sections  $\beta_x$  can be obtained by substituting the flange thickness  $T_1$  or  $T_2$  equal to zero; also for Tee sections the warping constant,  $\Gamma$  is zero.

## 6.0 BUCKLING OF NON-UNIFORM BEAMS

Non-uniform beams are often used in situations, where the strong axis bending moment varies along the length of the beam. They are found to be more efficient than beams of uniform sections in such situations. The non-uniformity in beams may be obtained in several ways. Rectangular sections generally have taper in their depths. I-beams may be tapered in their depths or flange widths; flange thickness is generally kept constant. However, steps in flange width or thickness are also common.

Tapering of narrow rectangular beams will produce considerable reduction in minor axis flexural rigidity,  $EI_y$ , and torsional rigidity,  $GJ$ ; consequently, they have low resistance to lateral torsional buckling. Reduction of depth in I-beams does not affect  $EI_y$ , and has only marginal effect on  $GJ$ . But warping rigidity,  $E\Gamma$ , is considerably reduced. Since the contribution of warping rigidity to buckling resistance is marginal, depth reduction does not influence significantly the lateral buckling resistance of I beams. However, reduction in flange width causes large reduction in  $GJ$ ,  $EI_y$  and  $E\Gamma$ . Similarly, reduction in flange thickness will also produce large reduction in  $EI_y$ ,  $E\Gamma$ , and  $GJ$  in that order. For small degrees of taper there is little difference between width-tapered beams and thickness tapered beams. But for highly tapered beams, the critical loads of thickness tapered ones are higher. Thus, the buckling resistance varies considerably with change in the flange geometry.

Based on the analysis of a number of beams of different cross sections with a variety of loading and support conditions, the elastic critical load for a tapered beam may be determined approximately by applying a reduction factor  $r$  to the elastic critical load for an equivalent uniform beam possessing the properties of the cross section at the point of maximum moment

$$r = \frac{7 + \gamma}{5 + 3\gamma} \quad (9)$$

$$\gamma = \frac{S_{x0}}{S_{x1}} \left[ \left( \frac{D_1}{D_0} \right)^3 \left( \frac{B_0}{B_1} \right)^3 \left( \frac{T_0}{T_1} \right)^2 \right] \quad (10)$$

$S_x$  = section modulus.

$T$  = flange thickness.

$D$  = depth of the section.

$B$  = flange width.

Subscripts 0 and 1 relate to the points of maximum and minimum moment respectively.

For the design of non-uniform sections, BS 5950 provides a simple method, in which the properties where the moment is maximum may be used and the value of  $n$  is suitably adjusted. The value of  $n$  is given by


$$n = 1.5 - 0.5 A_{sm} / A_{lm} \geq 1.0 \quad (11)$$

Where  $A_{sm}$  and  $A_{lm}$  are flange areas at the points of the smallest and largest moment, and  $m = 1.0$

## 7.0 BEAMS OF UNSYMMETRICAL SECTIONS

The theory of lateral buckling of beams developed so far is applicable only to doubly symmetrical cross sections having uniform properties throughout its length. Many lateral buckling problems encountered in design practice belong to this category. However, cases may arise where the symmetry property of the section may not be available. Such cases are described briefly in this Section.

The basic theory can also be applied to sections symmetrical about minor axis only e.g. Channels and Z-sections. In this section, the shear centre is situated in the axis of symmetry although not at the same point as the centroid. In the case of channel and Z sections, instability occurs only if the loading produces pure major axis bending. The criterion is satisfied for the two sections if: (1) for the channel section, the load must act through the shear centre Fig.8 (a) and, (2) for Z-section in a direction normal to the horizontal principal plane [Fig.8 (b)].

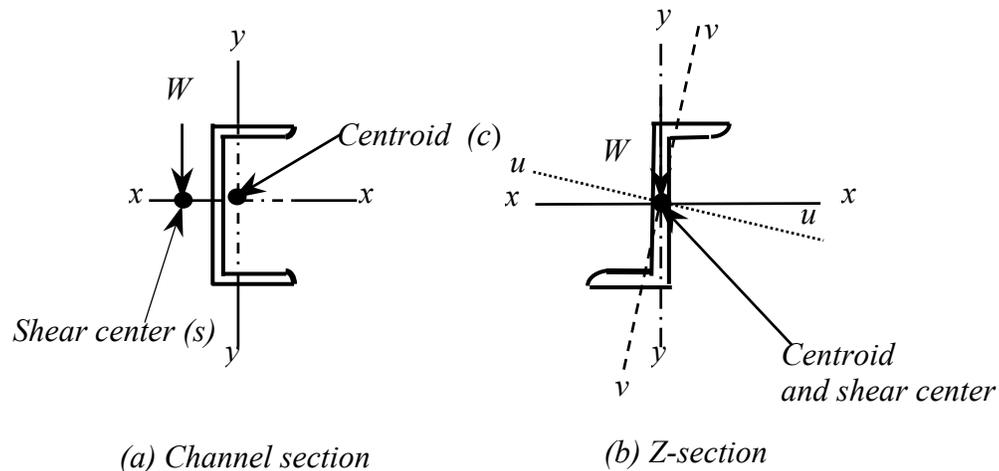

**Fig. 8 Loading through shear centre**

If these conditions are satisfied,  $M_{cr}$  of these sections can be obtained using their properties and the theoretical equation. The warping constant  $\Gamma$  for the sections are:

$$\Gamma = \frac{T B^3 h}{12} \left[ \frac{3 B T + 2 h t}{6 B T + h t} \right] \text{ for a channel} \quad (12)$$

$$\Gamma = \frac{B^3 h^2}{12(2 B t h)^2} \left[ 2 t (B^2 + B h + h^2) + 3 t B h \right] \text{ for a Z-section} \quad (13)$$

where,

$h$  = distance between flange centroids


$t$  = thickness of web

$B$  = total width of flange

$T$  = flange thickness.

It is very difficult to obtain such loading arrangements so as to satisfy the restrictions mentioned above. In such cases, the behaviour may not be one of lateral stability; instead a combination of bending and twisting or bi-axial bending.

For sections, which have symmetry about minor axis only, their shear centre does not coincide with the centroid. This results in complicated torsional behaviour and theoretical predictions are not applicable. Fig. 9 shows the instability behaviour of sections with flanges of varying sizes and positions (top or bottom). It can be seen from the figure that sections with flange in the compression region are more advantageous.

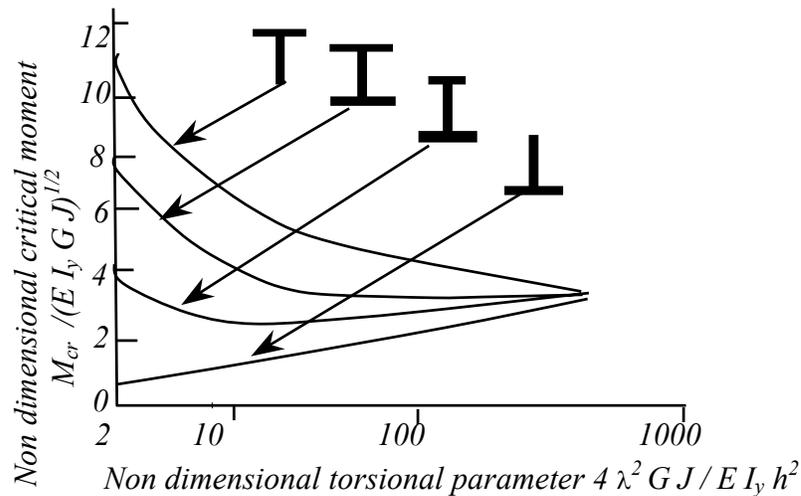

**Fig. 9 Effect of flange position and proportion on lateral stability**

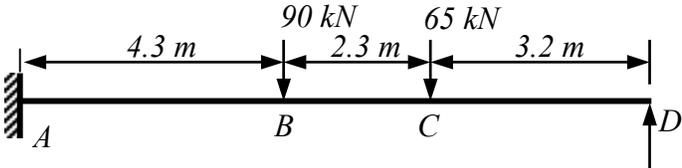
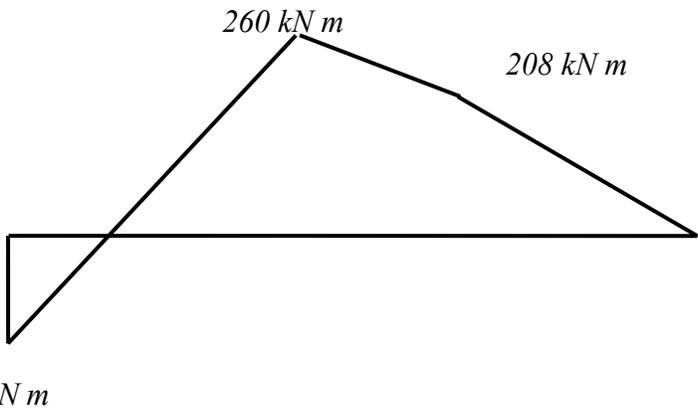
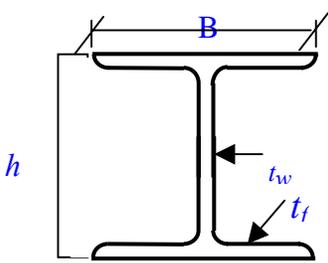
While considering the case of tapered beams, it has been established, based on lateral stability studies, that variation of the flange properties can cause large changes in the lateral buckling capacity of the beam, whereas tapering of depth has insignificant influence on the buckling capacity.

## 8.0 SUMMARY

In this chapter, lateral torsional buckling of some practical cases of beams has been explained. It is pointed out that for cantilever beams the type of restraint provided at fixed -end plays a significant role in their buckling capacities. Torsional restraint of the cantilever beam has been found to be more beneficial than lateral restraint. In the case of beams with equally spaced and loaded cross beams the critical moment of the main beam and the associated buckling mode will depend on the spacing of the cross beams. Requirements for effective lateral restraint have been presented. Continuous restraint provided by concrete floors to beams in composite constructions of buildings is discussed. As discussed in an earlier chapter, the local buckling effects should be taken into account by satisfying the minimum requirements of the member cross-section. Cases of monosymmetric beams and non- uniform beams are also briefly explained. Finally cases of beams with un-symmetric sections are discussed and concluded that beams with flanges in the compression zone are more advantageous from the point of view of lateral torsional buckling.

## 9.0 REFERENCES

1. Trahair N.S., 'The behaviour and design of steel structures', Chapman and Hall London, 1977
2. Kirby P.A. and Nethercot D.A., 'Design for structural stability', Granada Publishing, London, 1979

<b>Structural Steel Design Project</b>	Job No.	Sheet 1 of 10	Rev.
	Job title: <i>UNRESTRAINED BEAM DESIGN</i>		
	Worked example: I		
	Made by. GC		Date. 26/02/07
<b>Calculation sheet</b>	Checked by. TKB		Date. 28/02/07
<p><b>Problem I :</b></p> <p><i>A propped cantilever has a span of 9.8 m. it is loaded by cross beams at 4.3 m and 6.6 m from its left hand end. The ends of the beam and the loaded points are assumed to be fully braced laterally and torsionally.</i></p>  <p><i>The loads as given are factored.</i></p> <p><i>Design a suitable section for the beam:</i></p> <p><i>The bending moment diagram of the beam is as shown below.</i></p>  <p><i>Section classification of ISMB 450:</i></p> <p><i>The properties of the section are:</i></p>  <p style="margin-left: 400px;"><i>Depth, <math>h = 450</math> mm</i></p> <p style="margin-left: 400px;"><i>Width, <math>B = 150</math> mm</i></p> <p style="margin-left: 400px;"><i>Web thickness, <math>t_w = 9.4</math> mm</i></p> <p style="margin-left: 400px;"><i>Flange thickness, <math>t_f = 17.4</math> mm</i></p>			

<b>Structural Steel Design Project</b>	Job No.	Sheet 2 of 10	Rev.
	Job title: <i>UNRESTRAINED BEAM DESIGN</i>		
	Worked example: <i>I</i>		
		Made by. GC	Date.26/02/07
<b>Calculation sheet</b>		Checked by. TKB	Date.28/02/07
<p><i>Depth between fillets, <math>d = 379.2</math> mm.</i></p> <p><i>Radius of gyration about minor axis, <math>r_y = 30.1</math> mm.</i></p> <p><i>Plastic modulus about major axis, <math>Z_p = 1533.36 \times 10^3</math> mm<sup>3</sup></i></p> <p><i>Assume <math>f_y = 250</math> N / mm , <math>E = 200000</math> N / mm<sup>2</sup> , <math>\gamma_m = 1.10</math></i></p> <p><b>(1) Type of section</b></p> <p>(i) <i>flange criterion:</i></p> $b = \frac{B}{2} = \frac{150}{2} = 75 \text{ mm}$ $\frac{b}{T} = \frac{75}{17.4} = 4.31$ $\frac{b}{T} < 9.4\varepsilon, \text{ where } \varepsilon = \sqrt{\frac{250}{f_y}}$ <p style="text-align: right;"><i>Hence o.k.</i></p> <p>(ii) <i>Web criterion:</i></p> $\frac{d}{t} = \frac{379.2}{9.4} = 40.3$ $\frac{d}{t} < 84\varepsilon$ <p style="text-align: right;"><i>Hence o.k.</i></p> <p><i>Since <math>\frac{b}{t_f} &lt; 9.4\varepsilon</math> and <math>\frac{d}{t_w} &lt; 84\varepsilon</math>, the section is classified as 'plastic'</i></p> <p><i>Now the moment gradients are different for different segments of the entire span viz. for AB, BC and CD.</i></p> <p><i>So based on the moment gradients, each segment will be checked against Lateral Torsional Buckling and the corresponding safe bending stress will also be checked for each segment.</i></p>			<p><i>Appendix I of IS: 800</i></p> <p><i>Table 3.1 (Section 3.7.2) of IS: 800</i></p>

<b>Structural Steel Teaching Project</b>	Job No.	Sheet 3 of 10	Rev.
	Job title: <i>UNRESTRAINED BEAM DESIGN</i>		
	Worked example: <i>I</i>		
		Made by. GC	Date.26/02/07
<b>Calculation sheet</b>		Checked by. TKB	Date.28/02/07
<p><b>(iii) Lateral torsional buckling for segment AB:</b></p> <p><i>The beam length AB = 4.3 m</i></p> <p><i>Check for Slenderness Ratio:</i></p> <p><i>Effective length criteria:</i></p> <p>With ends of compression flanges fully restrained for torsion at support but both the flanges are not restrained against Warping, effective length of simply supported beam <math>L_{LT} = 1.0 L</math>, where <math>L</math> is the span of the beam.</p> <p><i>Hence, <math>L_{LT} = 1.0 \times 4.3 \text{ m} = 4300 \text{ mm}</math>, <math>L_{LT}/r = 4300/30.1 = 142.86</math></i></p> <p>Since the moment is varying from -130 k-Nm to 260 k-Nm, there will be moment gradient. So for calculation of <math>f_{bd}</math>, Critical Moment, <math>M_{cr}</math> is to be calculated.</p> <p>Now, Critical Moment,</p> $M_{cr} = c_1 \frac{\pi^2 EI_y}{(KL)^2} \left\{ \left[ \left( \frac{K}{K_w} \right)^2 \frac{I_w}{I_y} + \frac{GI_t (KL)^2}{\pi^2 EI_y} + (c_2 y_g - c_3 y_j)^2 \right]^{0.5} - (c_2 y_g - c_3 y_j) \right\}$ <p>Where,</p> <p><math>c_1, c_2, c_3</math> = factors depending upon the loading and end restraint conditions (Table F.1)</p> <p><math>K, K_w</math> = effective length factors of the unsupported length accounting for boundary conditions at the end lateral supports,</p> <p>Here, both <math>K</math> and <math>K_w</math> can be taken as 1.0.</p> <p>and</p> <p><math>y_g = y</math> distance between the point of application of the load and the shear centre of the cross section and is positive when the load is acting towards the shear centre from the point of application</p> $y_j = y_s - 0.5 \int_A (z^2 - y^2) y \, dA / I_z$			
			<p><i>Table 8.3 of IS: 800</i></p> <p><i>Clause F.1.2 of Appendix F of IS: 800</i></p>

<b>Structural Steel Design Project</b>	Job No.	Sheet 4 of 10	Rev.
	Job title: <i>UNRESTRAINED BEAM DESIGN</i>		
	Worked example: <i>I</i>		
	Made by. <i>GC</i>		Date. <i>26/02/07</i>
<b>Calculation sheet</b>	Checked by. <i>TKB</i>		Date. <i>28/02/07</i>
<p><math>y_s =</math> coordinate of the shear centre with respect to centroid, positive when the shear centre is on the compression side of the centroid</p> <p>Here, for plane and equal flange I section,</p> $y_g = 0.5 \times h = 0.5 \times 0.45 = 0.225 \text{ M} = 225 \text{ mm}$ $y_j = 1.0 (2\beta_f - 1) h_y / 2.0 \quad (\text{when } \beta_f \leq 0.5)$ <p><math>h_y =</math> distance between shear centre of the two flanges of the cross section = <math>h - t_f</math></p> <p>here, <math>\beta_f = 0.5</math>, and <math>h_y = h - t_f = 450 - 17.4 = 432.6 \text{ mm}</math></p> <p>hence, <math>y_j = 1.0 \times (2 \times 0.5 - 1) \times 432.6 / 2.0 = 0</math></p> <p>and <math>y_s = 0</math></p> $I_t = \sum b_i t_i^3 / 3, \text{ for open section}$ $= 2 \times 150 \times 17.4^3 + (450 - 2 \times 17.4) \times 9.4^3 = 192.527 \times 10^4 \text{ mm}^4$ <p>The warping constant, <math>I_w</math>, is given by</p> $I_w = (1 - \beta_f) \beta_f I_y h_y^2 \quad \text{for I sections mono-symmetric about weak axis}$ $= (1 - 0.5) \times 0.5 \times 834 \times 10^4 \times 432.6^2 = 39019265.46 \times 10^4 \text{ mm}^6$ <p>Modulus of Rigidity, <math>G = 0.769 \times 10^5 \text{ N/mm}^2</math></p> <p>Here, <math>\psi = -130/260 = -0.5</math> and <math>K = 1.0</math>, for which <math>c_1 = 2.704</math>, <math>c_2 = 0</math> and <math>c_3 = 0.676</math></p> <p>Hence, Critical Moment,</p> $M_{cr} = c_1 \frac{\pi^2 E I_y}{(KL)^2} \left\{ \left[ \left( \frac{K}{K_w} \right)^2 \frac{I_w}{I_y} + \frac{G I_t (KL)^2}{\pi^2 E I_y} + (c_2 y_g - c_3 y_j)^2 \right]^{0.5} - (c_2 y_g - c_3 y_j) \right\}$ $= 2.704 \frac{\pi^2 \times 200000 \times 834 \times 10^4}{(1.0 \times 4300)^2} \left\{ \left[ \left( \frac{1}{1} \right)^2 \frac{39019265 \times 10^4}{834 \times 10^4} + \frac{0.769 \times 10^5 \times 192.527 \times 10^4 \times 4300^2}{\pi^2 \times 200000 \times 834 \times 10^4} \right]^{0.5} \right\}$			
			<i>Table F.1 of Appendix F of IS: 800</i>

<b>Structural Steel Design Project</b>	Job No.	Sheet 5 of 10	Rev.
	Job title: <i>UNRESTRAINED BEAM DESIGN</i>		
	Worked example: <i>I</i>		
	<b>Calculation sheet</b>	Made by. <i>GC</i>	Date. <i>26/02/07</i>
	Checked by. <i>TKB</i>	Date. <i>28/02/07</i>	
<p><math>= 1111296062.60 \text{ N-mm}</math></p> <p><b>Calculation of <math>f_{bd}</math>:</b></p> <p>Now, <math>\lambda_{LT} = \sqrt{\beta_b Z_p f_y / M_{cr}} = \sqrt{1.0 \times 1533.36 \times 10^3 \times 250 / 1111296.06 \times 10^3}</math>  <math>= 0.587</math></p> <p>for which, <math>\phi_{LT} = 0.5x[1 + \alpha_{LT}(\lambda_{LT} - 0.2) + \lambda_{LT}^2]</math>  <math>= 0.5x[1 + 0.21(0.587 - 0.2) + 0.587^2] = 0.713</math></p> <p>for which, <math>\chi_{LT} = \frac{1}{\{\phi_{LT} + [\phi_{LT}^2 - \lambda_{LT}^2]^{0.5}\}} = \frac{1}{\{0.713 + [0.713^2 - 0.587^2]^{0.5}\}}</math>  <math>= 0.895</math></p> <p><math>f_{bd} = \chi_{LT} f_y / \gamma_{m0} = 0.895 \times 250 / 1.10 = 203.41 \text{ N/mm}^2</math></p> <p>Hence, <math>M_d = \beta_b Z_p f_{bd} = 1.0 \times 1533.36 \times 203.41 / 1000 = 311900.76 / 1000</math>  <math>= 311.90 \text{ kN-m}</math></p> <p>Max. Bending Moment, <math>M_{max} = 260 \text{ kN-m}</math></p> <p>Hence, <math>M_d &gt; M_{max} (311.90 &gt; 260)</math></p> <p><math>\therefore</math> ISMB 450 is adequate against lateral torsional buckling for the applied bending moments for the segment AB of the beam.</p> <p>(iv) <b>Lateral torsional buckling for segment BC:</b></p> <p>The beam length BC = 2.3 m</p> <p>Check for Slenderness Ratio:</p> <p>Effective length criteria:</p> <p>With ends of compression flanges fully restrained for torsion at support but both the flanges are not restrained against Warping, effective length of simply supported beam <math>L_{LT} = 1.0 L</math>, where <math>L</math> is the span of the beam.</p>			<p>Clause 8.2.2 of IS: 800</p> <p>Table 8.3 of IS: 800</p>

<h1>Structural Steel Design Project</h1>  <h2>Calculation sheet</h2>	Job No.	Sheet 6 of 10	Rev.	
	Job title: <i>UNRESTRAINED BEAM DESIGN</i>			
	Worked example: <i>I</i>			
		Made by. <i>GC</i>	Date. <i>26/02/07</i>	
	Checked by. <i>TKB</i>	Date. <i>28/02/07</i>		
<p>Hence, <math>L_{LT} = 1.0 \times 2.3 \text{ M} = 2300 \text{ mm}</math>, <math>L_{LT}/r = 2300/30.1 = 76.41</math></p> <p>Since the moment is varying from 260 k-Nm to 208 k-Nm, there will be moment gradient. So for calculation of <math>f_{bd}</math>, Critical Moment, <math>M_{cr}</math> is to be calculated.</p> <p>Now, Critical Moment,</p> $M_{cr} = c_1 \frac{\pi^2 EI_y}{(KL)^2} \left\{ \left[ \left( \frac{K}{K_w} \right)^2 \frac{I_w}{I_y} + \frac{GI_t (KL)^2}{\pi^2 EI_y} + (c_2 y_g - c_3 y_j)^2 \right]^{0.5} - (c_2 y_g - c_3 y_j) \right\}$ <p>Where,</p> <p><math>c_1, c_2, c_3</math> = factors depending upon the loading and end restraint conditions (Table F.1)</p> <p><math>K, K_w</math> = effective length factors of the unsupported length accounting for boundary conditions at the end lateral supports,</p> <p>Here, both <math>K</math> and <math>K_w</math> can be taken as 1.0.</p> <p>and</p> <p><math>y_g = y</math> distance between the point of application of the load and the shear centre of the cross section and is positive when the load is acting towards the shear centre from the point of application</p> $y_j = y_s - 0.5 \int_A (z^2 - y^2) y \, dA / I_z$ <p><math>y_s =</math> coordinate of the shear centre with respect to centroid, positive when the shear centre is on the compression side of the centroid</p> <p>Here, for plane and equal flange I section,</p> $y_g = 0.5 \times h = 0.5 \times 0.45 = 0.225 \text{ M} = 225 \text{ mm}$ $y_j = 1.0 (2\beta_f - 1) h_y / 2.0 \quad (\text{when } \beta_f \leq 0.5)$ <p><math>h_y =</math> distance between shear centre of the two flanges of the cross section = <math>h - t_f</math></p> <p>here, <math>\beta_f = 0.5</math>, and <math>h_y = h - t_f = 450 - 17.4 = 432.6 \text{ mm}</math></p>				<p><i>Clause F.1.2 of Appendix F of IS: 800</i></p>





<b>Structural Steel Design Project</b>	Job No.	Sheet 9 of 10	Rev.
	Job title: <i>UNRESTRAINED BEAM DESIGN</i>		
	Worked example: <i>I</i>		
	Made by. <i>GC</i>		Date. <i>26/02/07</i>
<b>Calculation sheet</b>	Checked by. <i>TKB</i>		Date. <i>28/02/07</i>
<p><math>K, K_w =</math> effective length factors of the unsupported length accounting for boundary conditions at the end lateral supports, Here, both <math>K</math> and <math>K_w</math> can be taken as 1.0. and</p> <p style="text-align: center;"><math>y_g = y</math> distance between the point of application of the load and the shear centre of the cross section and is positive when the load is acting towards the shear centre from the point of application</p> <p style="text-align: center;"><math>y_j = y_s - 0.5 \int_A (z^2 - y^2) y \, dA / I_z</math></p> <p style="text-align: center;"><math>y_s =</math> coordinate of the shear centre with respect to centroid, positive when the shear centre is on the compression side of the centroid</p> <p>Here, for plane and equal flange I section,</p> <p style="text-align: center;"><math>y_g = 0.5 \times h = 0.5 \times 0.45 = 0.225 \text{ m} = 225 \text{ mm}</math></p> <p style="text-align: center;"><math>y_j = 1.0 (2\beta_f - 1) h_y / 2.0</math> (when <math>\beta_f \leq 0.5</math>)</p> <p><math>h_y =</math> distance between shear centre of the two flanges of the cross section <math>= h - t_f</math></p> <p>here, <math>\beta_f = 0.5</math>, and <math>h_y = h - t_f = 450 - 17.4 = 432.6 \text{ mm}</math></p> <p>hence, <math>y_j = 1.0 \times (2 \times 0.5 - 1) \times 432.6 / 2.0 = 0</math></p> <p>and <math>y_s = 0</math></p> <p style="text-align: center;"><math>I_t = \sum b_i t_i^3 / 3</math>, for open section</p> <p style="text-align: center;"><math>= 2 \times 150 \times 17.4^3 + (450 - 2 \times 17.4) \times 9.4^3 = 192.527 \times 10^4 \text{ mm}^4</math></p> <p>The warping constant, <math>I_w</math>, is given by</p> <p style="text-align: center;"><math>I_w = (1 - \beta_f) \beta_f I_y h_y^2</math> for I sections mono-symmetric about weak axis</p> <p style="text-align: center;"><math>= (1 - 0.5) \times 0.5 \times 834 \times 10^4 \times 432.6^2 = 39019265.46 \times 10^4 \text{ mm}^6</math></p> <p>Modulus of Rigidity, <math>G = 0.769 \times 10^5 \text{ N/mm}^2</math></p>			

<b>Structural Steel Design Project</b>	Job No.	Sheet 10 of 10	Rev.
	Job title: UNRESTRAINED BEAM DESIGN		
	Worked example: I		
	Made by. GC		Date.26/02/07
<b>Calculation sheet</b>	Checked by. TKB		Date.28/02/07
<p>Here, <math>\psi = 0/208 = 0</math> and <math>K = 1.0</math>, for which  <math>c_1 = 1.879</math>, <math>c_2 = 0</math> and <math>c_3 = 0.939</math>  Hence, Critical Moment,</p> $M_{cr} = c_1 \frac{\pi^2 EI_y}{(KL)^2} \left\{ \left[ \left( \frac{K}{K_w} \right)^2 \frac{I_w}{I_y} + \frac{GI_t (KL)^2}{\pi^2 EI_y} + (c_2 y_g - c_3 y_j)^2 \right]^{0.5} - (c_2 y_g - c_3 y_j) \right\}$ $= 1.879 \frac{\pi^2 \times 200000 \times 834 \times 10^4}{(1.0 \times 3200)^2} \left\{ \left[ \left( \frac{1}{1} \right)^2 \frac{39019265 \times 10^4}{834 \times 10^4} + \frac{0.769 \times 10^5 \times 192.527 \times 10^4 \times 3200^2}{\pi^2 \times 200000 \times 834 \times 10^4} \right]^{0.5} \right\}$ $= 1125742175.56 \text{ N-mm}$ <p><b>Calculation of <math>f_{bd}</math>:</b></p> <p>Now, <math>\lambda_{LT} = \sqrt{\beta_b Z_p f_y / M_{cr}} = \sqrt{1.0 \times 1533.36 \times 10^3 \times 250 / 1125742.18 \times 10^3}</math>  <math>= 0.584</math>  for which, <math>\phi_{LT} = 0.5x[1 + \alpha_{LT}(\lambda_{LT} - 0.2) + \lambda_{LT}^2]</math>  <math>= 0.5x[1 + 0.21(0.584 - 0.2) + 0.584^2] = 0.71</math>  for which, <math>\chi_{LT} = \frac{1}{\left\{ \phi_{LT} + [\phi_{LT}^2 - \lambda_{LT}^2]^{0.5} \right\}} = \frac{1}{\left\{ 0.71 + [0.71^2 - 0.584^2]^{0.5} \right\}}</math>  <math>= 0.898</math>  <math>f_{bd} = \chi_{LT} f_y / \gamma_{m0} = 0.898 \times 250 / 1.10 = 204.09 \text{ N/mm}^2</math>  Hence, <math>M_d = \beta_b Z_p f_{bd} = 1.0 \times 1533.36 \times 204.09 / 1000 = 312943.44 / 1000</math>  <math>= 312.94 \text{ kN-m}</math>  Max. Bending Moment, <math>M_{max} = 208 \text{ kN-m}</math>  Hence, <math>M_d &gt; M_{max}</math> (<math>312.94 &gt; 208</math>)  ISMB 450 is adequate against lateral torsional buckling for the applied bending moments for the segment CD of the beam.</p>			<p>Table F.1 of Appendix F of IS: 800</p> <p>Clause 8.2.2 of IS: 800</p>